 


Ford F250 DRCS 110 Speaker Bracket

MODEL : 935-0081A

Installation Instructions

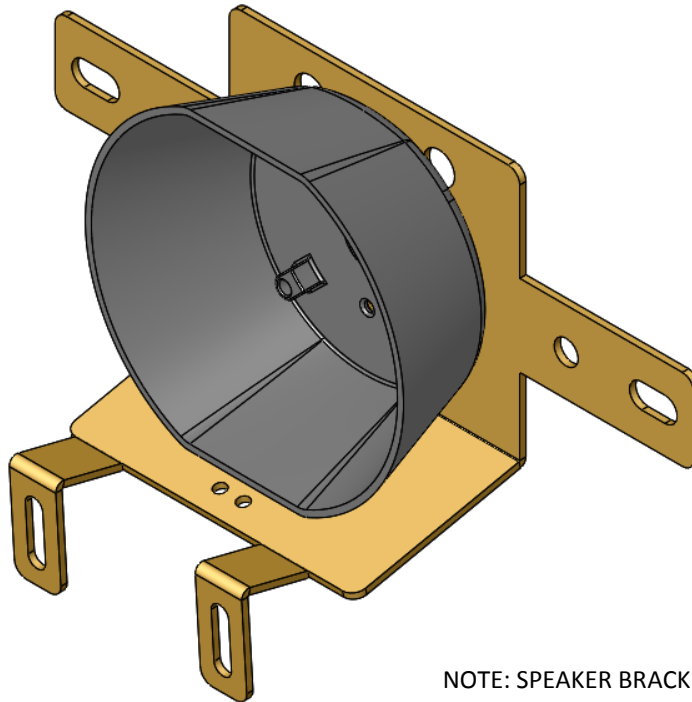

NOTE: SPEAKER BRACKET INTENDED FOR GAS FORD F250'S. BRACKET WILL NOT FIT ON DIESEL F250'S.

Table of Content

SERIAL #	Description	PAGE NO
1	Part List	2
2	Hardware List	2
6	Installation instruction	4
8	Warranty and product return policy	6

Parts List

Part #	Description	Qty
935-0081A	Ford F250 DRCS 110 Speaker Bracket	1

Hardware List

411-0050	3/8-16 x 1" Hex Bolt S.S	4
432-0010	3/8 - 16 Nyloc Nut S.S	4
413-0010	3/8 Fender Washer S.S	8

General Warning

1. The use of emergency warning devices does not ensure the safety of the operator. The operator is responsible to ensure safe operation of the vehicle regardless of whether the warning device is in operation or not
2. The effectiveness of this or any warning device is highly dependent on proper installation and maintenance. ***Read the manufactures instructions before installing and follow all recommendations.***
3. When in use the operator must ensure that the warning signal is visible and not obstructed by vehicle components (i.e. open trunk lid), people or other obstructions
4. This device is intended for use by authorized personnel only The user is responsibility to ensure that all local, state/provincial and federal laws are being complied with. D&R assumes no liability for any loss resulting from the use of this device.
5. The device must be installed so as not to reduce the output performance of vehicle systems
6. Placement of control switches must be so as to provide convenient reach for the operator without loosing eye contact with the road.
7. Emergency warning devices require high electrical voltages and/or currents. Properly connect and ground all circuits. Shorting or improper grounding of this device may caused personal injuring, vehicle damage or both
8. ***All operators should be properly trained in the operation of this device to ensure both their and public safety***

Installation and Mounting

Warning

1. Any device used inside a vehicle, may cause severe personal injury if not properly mounted and secured. Objects used in the vehicle may become airborne during a collision or other sudden changes in vehicle speed or direction, such as braking, acceleration or turns.
2. Be sure to mount unit through the steel of the vehicle. Avoid mounting through non-structural materials.
3. **POINT OF INSTALLATION MUST NOT INTERFERE WITH DEPLOYMENT OF VEHICLE AIR BAGS.**

Installation Instructions

Step 1

Connect DRCS 110 speaker to the bracket using supplied hardware from the speaker. Two bolts should be holding the speaker parts together, but not fully tightened leaving a small gap. Place speaker bolts through large hole and drop into place, then proceed with securing the speaker to the bracket with the rest of the hardware. Tighten all hardware after speaker is on.

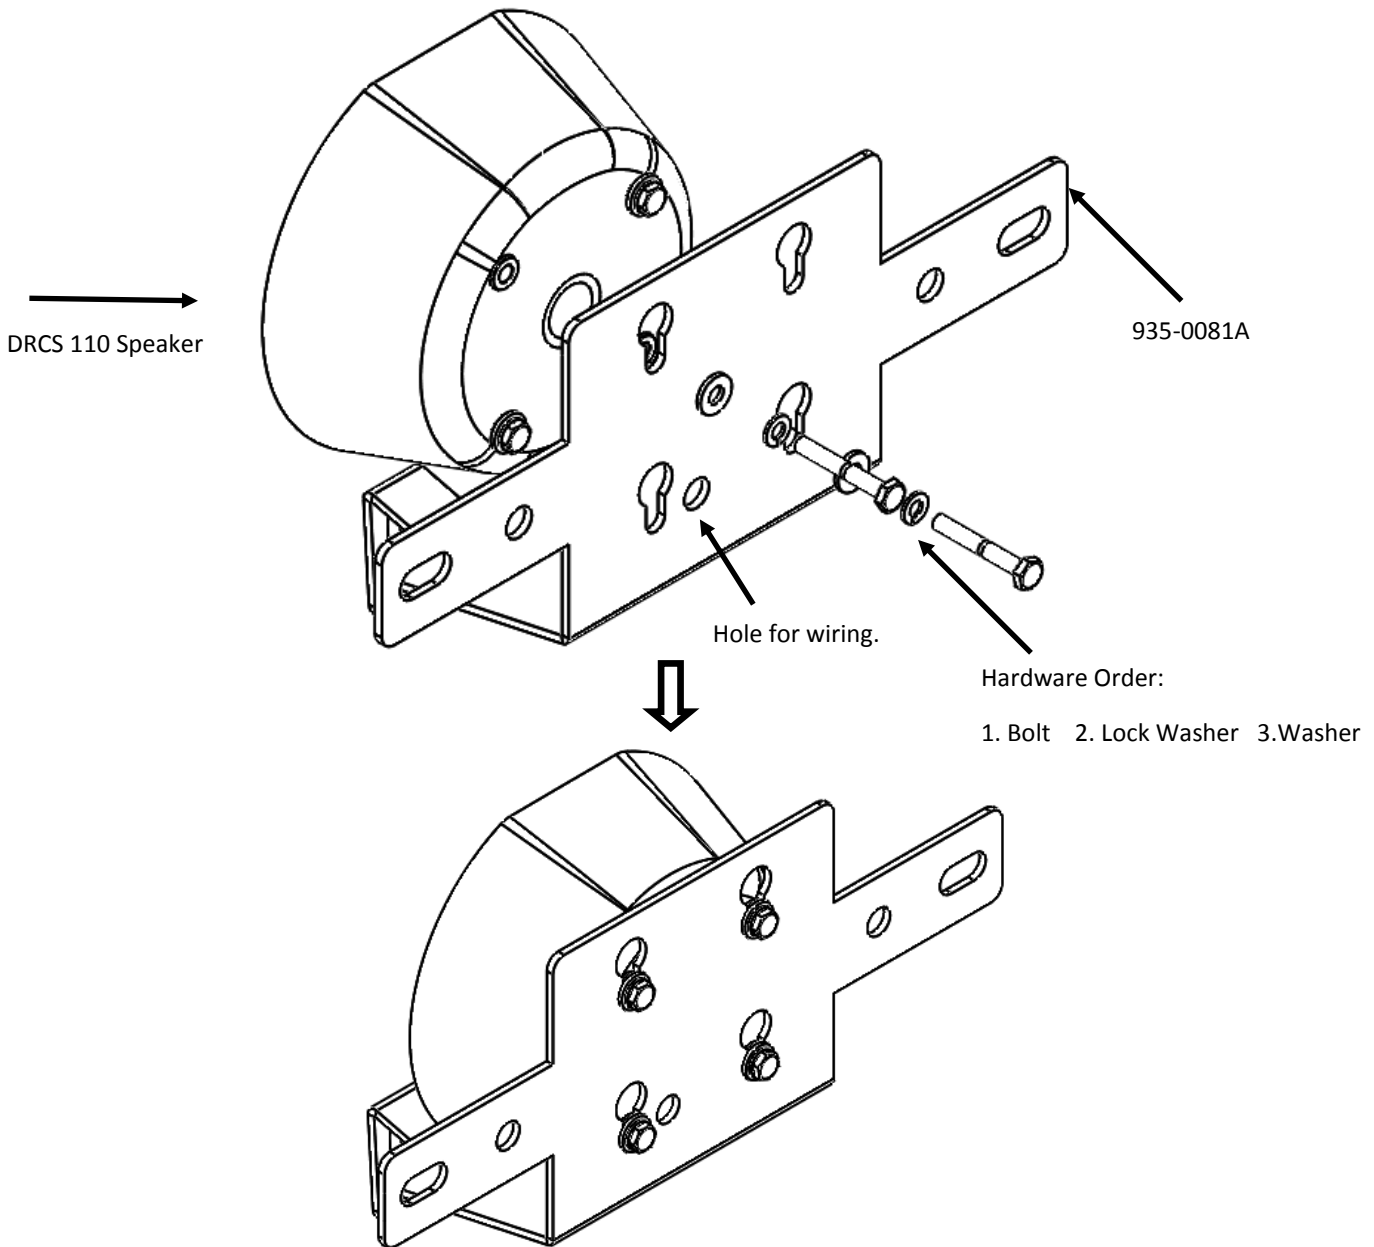 


Figure 1. Speaker mounting.

Step 2

Begin by removing two middle screws on back side of the bumper (seen in figure 4). Place bracket under the front of the F250, in-between the bumper and body. A horizontal black plate located on the body behind the bumper of the vehicle is the focal mounting point for the bracket. Using the hardware given, mount bracket to the vehicle. Use one fender washer on each side of bracket (front and back).



Figure 2. Location for bracket.

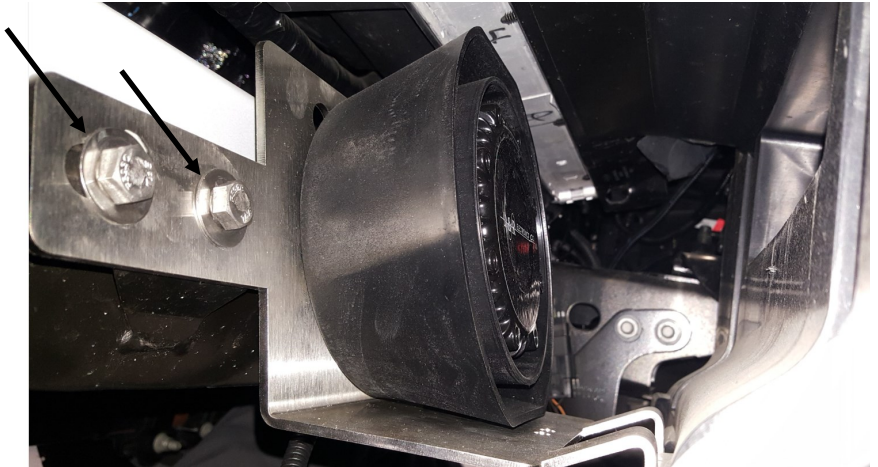 


Figure 3. Mounting point for hardware located as shown and opposite side.

Step 3

Use screws removed in step 2, secure bottom of the speaker bracket to the back side of the bumper. Make sure all hardware is fastened tightly and all wiring is through allocated holes to complete the installation.



Figure 4. Bumper mounting point.



Figure 5. Final mounting position.

WARRANTY

D & R Electronics warrants its new products to be free from defects in material and workmanship, under normal use and service, for a period of one year on parts replacement, and one year on labor. This warranty applies only to original purchasers acquiring the product directly from D&R Electronics, or its authorized dealers. Warranty will not be recognized without proof of purchase or bill of sale. This warranty is not transferable. The warranty begins on the date of delivery to the first user/purchaser. This warranty shall not apply to products which must be repaired due to normal wear and tear, negligence, improper installation, abuse, misuse, or which have been altered or modified at a facility other than D & R Electronics, or its authorized depot center. Units proved to be defective within the warranty period, based on an examination by D&R Electronics, will be replaced or repaired at D & R Electronics' option. This warranty does not cover travel expenses or labor charges for removal or installation. Lamps, flash tubes, batteries or other items considered consumables are not covered under warranty. This warranty is in lieu of all other express warranties. D&R Electronics makes no other warranties, expressed or implied, than the express warranties contained herein.

PRODUCT RETURN POLICY

In order to provide you with faster service, product returns for repair or replacement, must have a **Return Goods Authorization Number (RGA number)**. Please contact our company to obtain a RGA number before you return the product to D & R ELECTRONICS. Write the RGA number clearly on the package. Be sure you use sufficient packing materials to avoid damage to the product being returned while in transit.

D & R ELECTRONICS assumes no responsibility or liability for expenses incurred for the removal and/or the installation of products requiring service and/or repair. Repairing or replacing product is at the discretion of D & R ELECTRONICS.

D&R ELECTRONICS Co. LTD.

CANADA

8820 George Bolton Pkwy.
Bolton, Ontario L7E 2Y4

Tel.: (905)951-9997

USA

2321 Kenmore Avenue
Buffalo New York 14207

Toll Free 1-800-538-7338

Fax: (905)951-0019

www.dandrelectronics.com