


ANTI-THEFT MODULE INSTALLATION INSTRUCTIONS FOR 2007 FCV

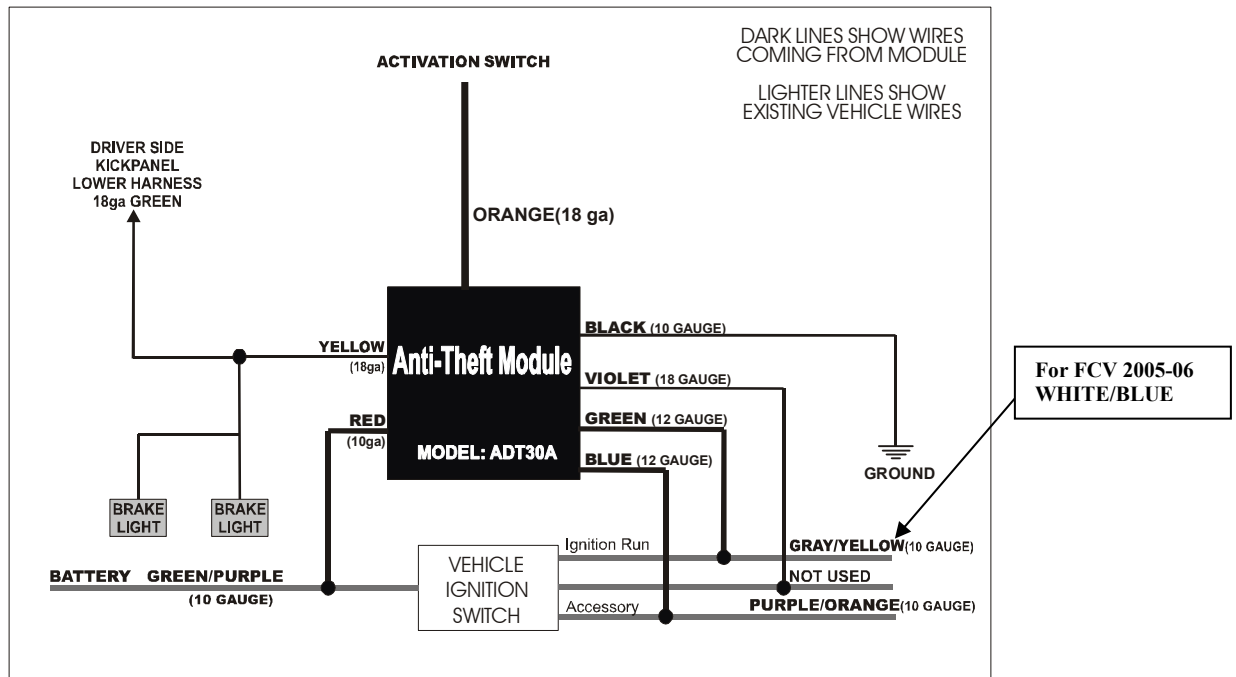

INSTALLATION INSTRUCTIONS

MOUNTING

The Anti-Theft Module should be installed near the steering column within wire length of the ignition switch. The activation switch should be installed in a convenient location.

CONNECTING THE WIRES

GREEN WIRE

Find the *IGNITION RUN* wire (*GRAY/YELLOW*) coming out from the *IGNITION SWITCH*. Tap or “T” the GREEN wire from the module into it.

NOTE: For CV2003+ is White/Yellow

For CV2002 is BROWN/PINK

BLUE WIRE

Locate the *BLOWER MOTOR CIRCUIT* wire (*PURPLE/ORANGE*) and tap the BLUE wire into it.

RED WIRE

Locate the *+12V* wire, coming to the *IGNITION SWITCH* from the battery. Tap the RED wire into it. (*GREEN/PURPLE*)

BLACK WIRE

Connect this wire to a convenient, reliable ground point.

ORANGE WIRE

Connect this wire to the Anti-Theft activation switch. (This will activate the Anti-Theft Module)

YELLOW WIRE

Locate the vehicle’s *BRAKE LIGHT SWITCH*. Tap the YELLOW wire to the brake light side of the switch. (This will deactivate the Anti-Theft Module).

VIOLET WIRE

Locate the *PINK/BLACK* wire coming from the *IGNITION SWITCH*. Tap this wire into it.

OPERATING INSTRUCTIONS

Follow the instructions below to activate the Anti-Theft Module.

1. Start the vehicle.
2. With the engine operating, activate the Anti-Theft Module by momentarily depressing the activation switch. The switch is normally in the open state, and will return to this state. A **RED** LED will come on when the Anti-Theft Module is activated.
3. Turn the ignition switch to the OFF position and remove the key. The engine will continue to run.

NOTE: The system will not activate unless the vehicle transmission is placed in the “**PARK**” position. For installation in manual transmission vehicles contact D & R Electronics.

If the brake pedal is pressed enough to activate the brake lights or to put the car in gear, the Anti-Theft Module will deactivate immediately and the engine will stop. Accessories will also stop operating. To restart the engine, the ignition key must be used.

WARRANTY

D & R Electronics warrants its new products to be free from defects in material and workmanship, under normal use and service, for a period of three years on parts replacement, and one year on labour.

This warranty applies only to original purchasers acquiring the product directly from D & R Electronics, or its authorized dealers. Warranty will not be recognized without proof of purchase or bill of sale. This warranty is not transferable.

The warranty begins on the date of delivery to the first user/purchaser.

This warranty shall not apply to products which must be repaired due to normal wear and tear, negligence, improper installation, abuse, misuse, or which have been altered or modified at a facility other than D & R Electronics, or its authorized depot center.

Units demonstrated to be defective within the warranty period, based on an examination by D & R Electronics, will be replaced or repaired at D & R Electronics' option.

This warranty does not cover travel expenses or labor charges for removal or installation. Lamps, flash tubes or batteries are not covered under warranty.

THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. D & R ELECTRONICS MAKES NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, THAN THE EXPRESS WARRANTIES CONTAINED HEREIN.

IN NO EVENT SHALL D & R ELECTRONICS BE LIABLE FOR OTHER DAMAGES INCLUDING CONSEQUENTIAL OR INDIRECT OR SPECIAL DAMAGES WHETHER LOSS IS DUE TO NEGLIGENCE OR BREACH OF WARRANTY.

D & R ELECTRONICS CO. LTD

8820 George Bolton Pkwy

Bolton, Ontario

L7E 2Y4

ADMINISTRATION: (905) 951-9997 FAX: (905) 951-0019

www.drelectronics.com