

## WARRANTY

D & R Electronics warrants its new products to be free from defects in material and workmanship, under normal use and service, for a period of one year on parts replacement, and one year on labor. This warranty applies only to original purchasers acquiring the product directly from D&R Electronics, or its authorized dealers. Warranty will not be recognized without proof of purchase or bill of sale. This warranty is not transferable. The warranty begins on the date of delivery to the first user/purchaser. This warranty shall not apply to products which must be repaired due to normal wear and tear, negligence, improper installation, abuse, misuse, or which have been altered or modified at a facility other than D & R Electronics, or its authorized depot center. Units proved to be defective within the warranty period, based on an examination by D&R Electronics, will be replaced or repaired at D & R Electronics' option. This warranty does not cover travel expenses or labor charges for removal or installation. Lamps, flash tubes, batteries or other items considered consumables are not covered under warranty. This warranty is in lieu of all other express warranties. D&R Electronics makes no other warranties, expressed or implied, than the express warranties contained herein.

## PRODUCT RETURN POLICY

In order to provide you with faster service, product returns for repair or replacement, must have a **Return Goods Authorization Number (RGA number)**. Please contact our company to obtain a RGA number before you return the product to D & R ELECTRONICS. Write the RGA number clearly on the package. Be sure you use sufficient packing materials to avoid damage to the product being returned while in transit. D & R ELECTRONICS assumes no responsibility or liability for expenses incurred for the removal and/or the installation of products requiring service and/or repair. Repairing or replacing product is at the discretion of D & R ELECTRONICS.

**D&R ELECTRONICS Co. LTD.**

### CANADA

8820 George Bolton Pkwy.  
Bolton, Ontario L7E 2Y4

Tel.: (905)951-9997  
Fax: (905)951-0019

[www.dandrelectronics.com](http://www.dandrelectronics.com)

### USA

40 Sonwil Drive  
Cheektowaga, NY, 14225

Toll Free 1-800-538-7338



## UNIVERSAL TABLET TRAY 907-0286A

### USER MANUAL



### Parts List

Part #	Description	Qty
907-0286A	UNIVERSAL TABLET TRAY	1
807-1254B	TRAY SIDE FINGERS LONG	4

### Hardware List

Line #	Description	Qty
1	SCREW #10-32 X 1/2"	4
2	WASHER #10 FLAT	4
3	WASHER #10 LOCK	4
4	NUTS #10-32 NYLOCK	4


COMPATIBLE WITH MOST 10 INCH TABLETS INCLUDING:

Apple iPad , iPad 2 , iPad 3 , iPad 4 ,& iPad AIR  
Samsung Galaxy Tab 10.1, Tab2 10.1, Tab3 10.1, TabPro 10.1, Note 10.1  
Panasonic FZ-G1 , HP Elitepad , Sony Xperia Tablet Z  
Microsoft Surface, Surface 2, Surface Pro, Surface Pro 2  
Lenovo Think Pad Tablet 2, Mixx 2, IdeaTab S6000

## User Instructions

### Step 1

Unfasten 4x Screws and remove back cover. Retain hardware for Step 4.


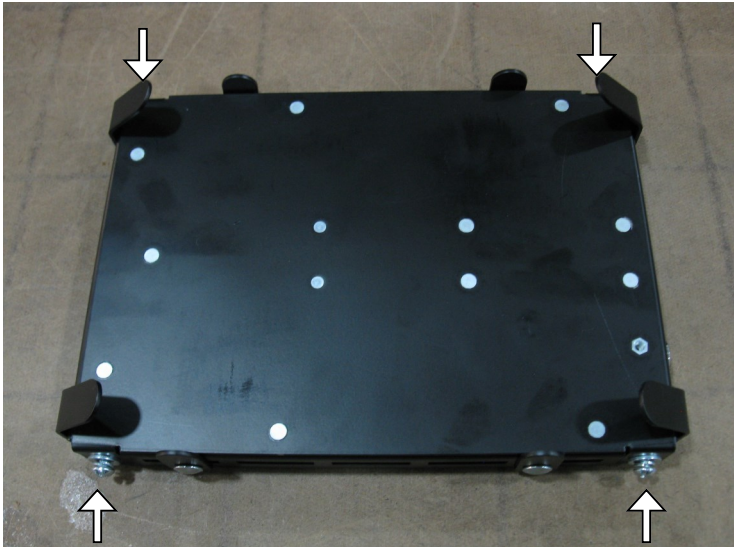


### Step 2

Unfasten Nuts and adjust tray size to fit the Tablet. We suggest placing the tablet in the tray for accurate sizing. For Thicker Tablets perform Step 3 first and then complete Step 2.

### Step 3 (Optional)

Unfasten Nuts and adjust Tray fingers as needed. Use Larger Tray Side fingers (provided) if required.

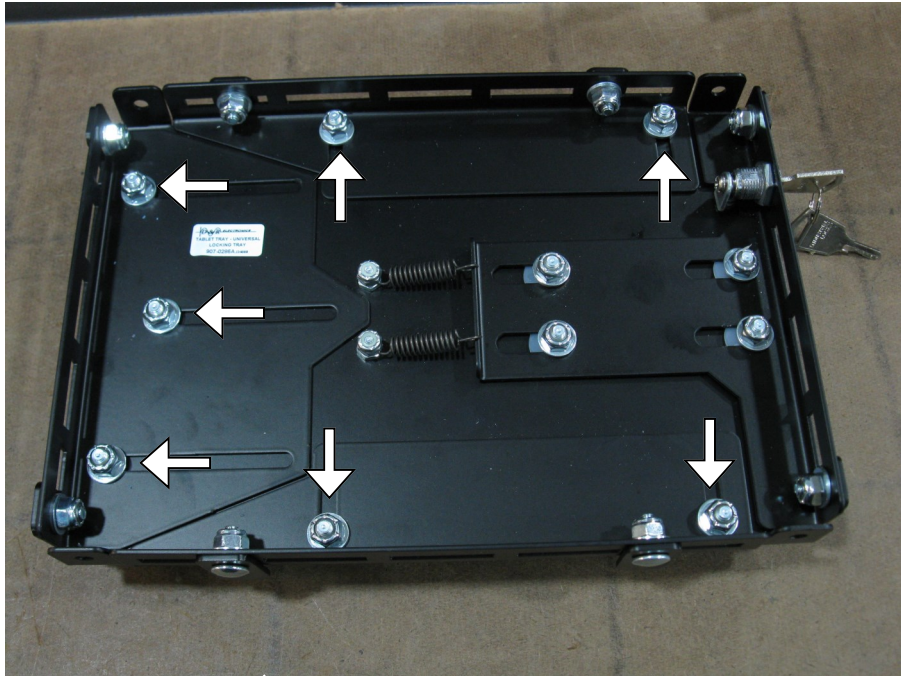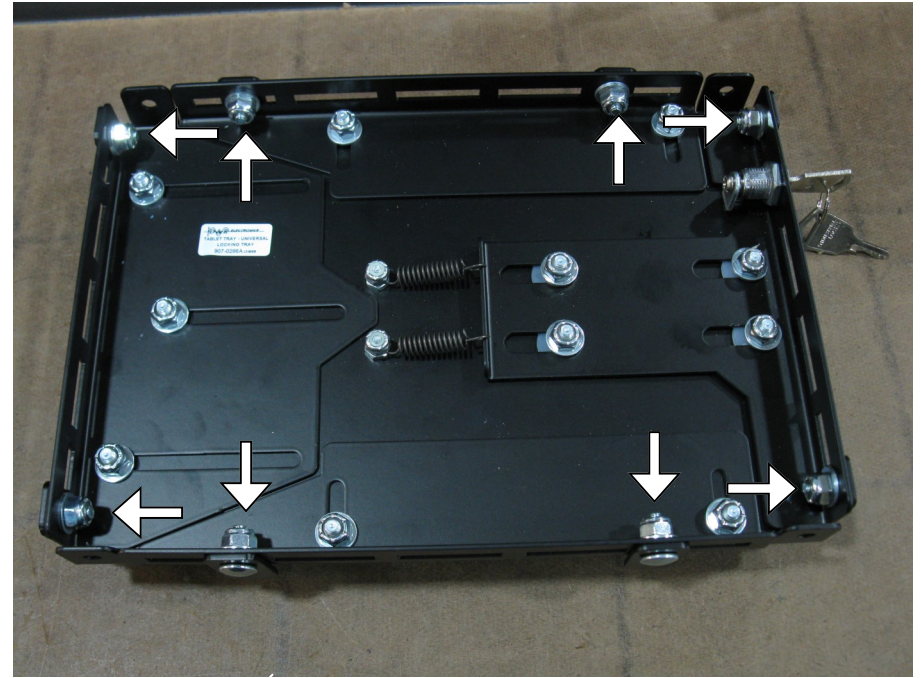

### Step 4

Secure Cover Plate to desired mount or surface. Use supplied hardware if required. Place Universal Tablet tray over the Cover Plate and Secure using hardware removed in Step 1.