
	ELECTRONICS CO. LTD.
MAN	EMERGENCY VEHICLE SOUND, LIGHTING & EQUIPMENT

2013 Ford Interceptor Explorer Storage Cabinet with Partition

INSTALLATION MANUAL

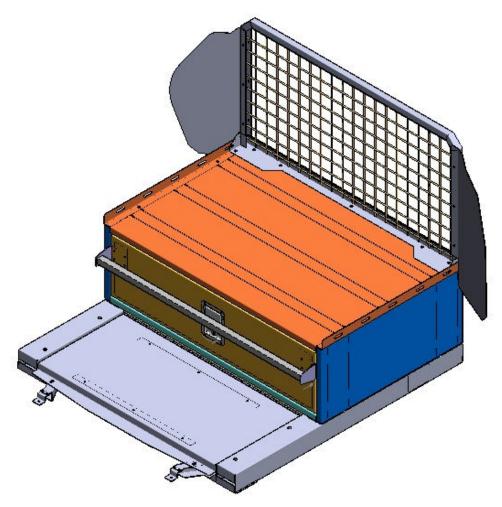

CONTENTS

Unpacking	 2
Installation	 2
Warranty	 6
Return Policy	 6

UNPACKING

Before beginning any installation, unpack the equipment received. After unpacking, examine **ALL** components received for any damage that may have occurred while in transit. If any damage has occurred, file a claim **IMMEDIATELY** with the courier stating the extent of damage. Check **ALL** envelopes, packing slips, shipping labels and tags

before removing or destroying them.

To ensure your satisfaction, open all cartons and report any shortages <u>within 48</u> hours of receipt.

HARDWARE PARTS LIST

Quantity	Description
4	3/8 x 1" Hex Bolt
4	3/8, Lock Washer
4	3/8, WASHER
6	1/4-20 X 1 1/2" Hex Bolt
6	1/4 –20 WASHER
6	1/4-20 Nylock Nuts


VEHICLE PREPARATION


Install the Interceptor Explorer Sub frame in the vehicle. Refer to the Sub frame Installation instructions for installing the Sub frame.

INSTALLATION OF UNIT

Step 1 Remove Cabinet Top

Remove all the Bolts located on the top of the cabinet and carefully lift the cabinet top and place aside.

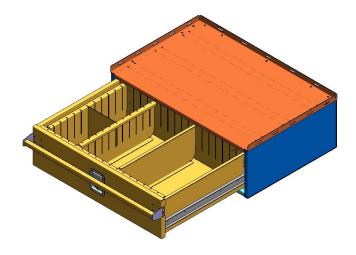

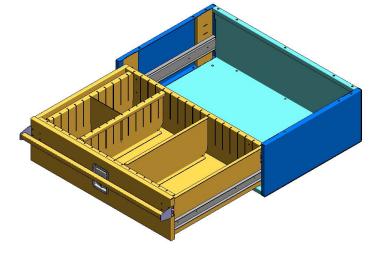

WARRANTY

D & R Electronics warrants its new products to be free from defects in material and workmanship, under normal use and service for a period of one year on parts replacement and one year on labor.

This warranty applies only to original purchasers acquiring the product directly from D&R Electronics, or its authorized dealers. Warranty will not be recognized without proof of purchase or bill of sale.

This warranty is not transferable.

The warranty begins on the date of delivery to the first user/purchaser.

This warranty shall not apply to products which must be repaired due to normal wear and tear, negligence, improper installation, abuse, misuse, or which have been altered or modified at a facility other than D & R Electronics, or its authorized depot centers.

Units proved to be defective within the warranty period, based on an examination by D&R Electronics, will be replaced or repaired at D & R Electronics' option. This warranty does not cover travel expenses or labor charges for removal or installation.

Lamps, flash tubes, batteries or other items considered consumables are not covered under warranty.

This warranty is in lieu of all other express warranties. D&R Electronics makes no warranties, expressed or implied, other than the express warranties contained herein.

PRODUCT RETURN POLICY

In order to provide you with faster service, product returns for repair or replacement, must have a **Return Goods Authorization Number (RGA number)**. Please contact our company to obtain a RGA number before you return the product to D & R ELECTRONICS. Write the RGA number clearly on the package. Be sure you use sufficient packing materials to avoid damage to the product being returned while in transit.

D & R ELECTRONICS assumes no responsibility or liability for expenses incurred for the removal and/or the installation of products requiring service and/or repair.

Repairing or replacing product is at the discretion of D & R ELECTRONICS.

D&R ELECTRONICS Co. LTD.

CANADA USA

8820 George Bolton Pkwy. Bolton, Ontario L7E 2Y4

40 Sonwil Drive Cheektowaga, NY, 14225


Tel.: (905)951-9997 Toll Free 1-800-538-7338

Fax: (905)951-0019


www.dandrelectronics.com

Step 2 Insert Hardware

Insert 4x 3/8 x 1" Hex Bolt, 3/8" Lock washers and Washers in the Holes.

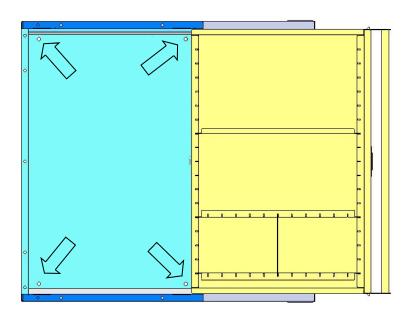

Step 3
Cabinet to Sub Frame
Place Cabinet on Sub frame and Secure by fastening Bolts placed in Step 2.

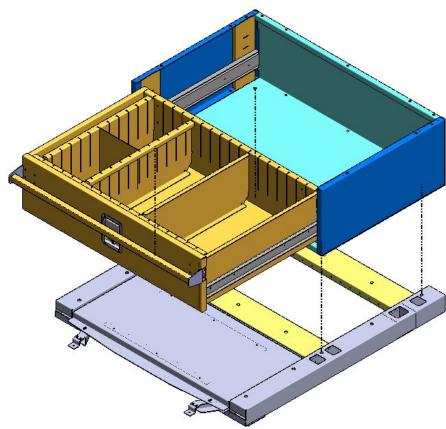


3

6


Step 4
Replace Top

Replace cabinet top. DO NOT REPLCE BOLTS.

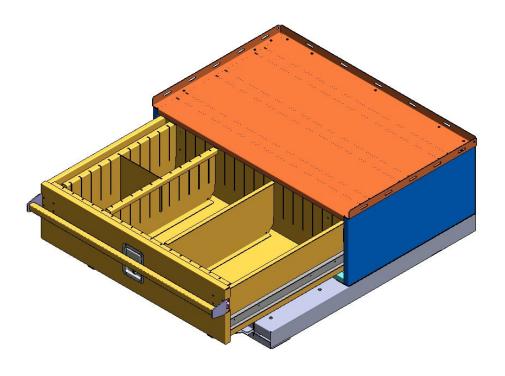


Step 5
Cabinet Partition

Place Cabinet partition and secure with cabinet using cabinet top bolts and washers removed in Step 1.

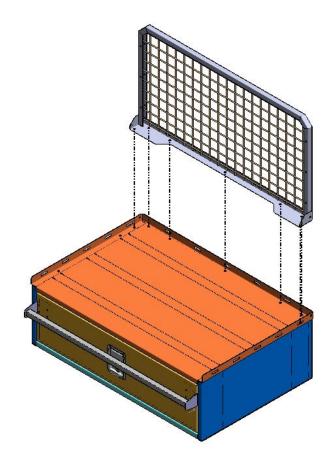

Step 6 (OPTIONAL) Side Panel to Partition

Place the DS and PS Side Panels and secure using 3X Each Hardware. 1/4-20 X 11/2" Hex Bolt, 1/4-20 Nylock Nuts, and 1/4-20 washers.

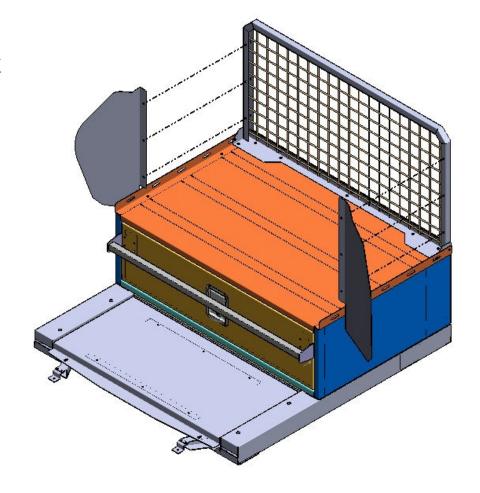

Installation is now complete.

